

# SNEAK TRIMLESS

## 1.0

01-Jul.-2017

### 1.0 LED

LED 7/10W | 350-500mA | 18Vf | COB 3-step | excl. power supply

CE IP20 0.3m 32° 35°/35° 355°

white texture	155151W
black texture	155151B

#### LIGHT COLOUR


2700K   >90CRI   335-470lm	3
3000K   >90CRI   375-510lm	5
1800-2850K   >95CRI   255-350lm	9

#### ALWAYS USE

plaster kit	90017116
-------------	----------


for power supplies see our catalogue

plaster kit (has to be ordered separately)




1.0 LED



①



②

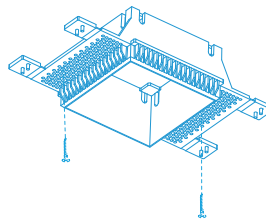

④

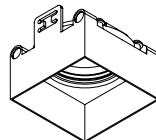

### DIMENSIONS

1.0 LED




### MOUNTING INSTRUCTION

- ① Make a hole in the ceiling according to the prescribed dimensions (always use a plaster kit)
- ② Click in the plaster kit into the ceiling and screw it tightly on the ceiling, then plaster the borders seamlessly.

### ③ POWER CONNECTION

SERIAL CONNECTION - for LED

**Always use POWER SUPPLY according to the specifications of the LED-module**



- ④ Insert the fixture in plaster kit.  
Place the LED-module in the fixture.



WEVER & DUCRÉ  
LIGHTING

[www.weverducre.com](http://www.weverducre.com)

Wever & Ducré bvba Kwadestraat 153 bus 2.1 8800 Roeselare

INSTALLATION  
INSTRUCTIONS